

**INTRODUCTION**

Your Anti-Hijack immobiliser is Microprocessor controlled and offers effective protection against the ever increasing problem of vehicle Hijacking.

The unit installed has been designed to immobilise your vehicle in a Hijack situation, while at the same time offering you, the legitimate driver, maximum protection by delaying the onset of the Hijack routine and thus distancing yourself from the Hijacker.

**OPERATION**

The Hijack Routine is initiated on the opening and closing of the drivers door. After entering your vehicle and closing the door, deactivate the Anti-Hijack immobiliser by depressing the hidden deactivation button before or after starting the vehicle. The immobiliser will now not affect the vehicle in any way.



Should you not deactivate the system as specified, after 30 seconds (or 1 minute selectable on installation) the vehicle will give a series of four slow down pulses. These will be perceived as gentle jerks in the vehicle to remind you to deactivate the system. Should you ignore these warning pulses, 30 seconds later (or 1 minute depending on selection at installation) a further 4 slow down pulses and thereafter a series of audible warnings are given. The immobiliser now begins to slow the vehicle down over a period of 1 minute, at the same time flashing the vehicle Hazard lights, effectively frustrating the hijacker and convincing him to abandon the vehicle. At the end of the slow down routine the audible warning will continue until 30 seconds after the Ignition is switched off. For safety purposes, the Hazards will continue to flash until the Hijack disable button is depressed.

