



## Operating Instructions

### Meta M36T2

#### **Arming:**

The engine is automatically immobilised 15 seconds after the ignition is switched off.

#### **Disarming:**

When you return to your vehicle, simply insert your electronic key into the receptacle located in the dash and then remove it. Your vehicle will now start.

#### **Additional Information:**

- IF the ignition is not switched on within 15 seconds of the electronic key being removed from the receptacle, the immobiliser will automatically re-arm itself.
- DO NOT turn your electronic key in the receptacle.
- IF the electronic key is left in the receptacle the vehicle will not start.