



### **M750T Operating Instructions**

**To arm the system :** Press the button on the original remote control unit. The red LED will flash and the system will be armed after 25 seconds.

**To arm the system excluding interior sensors :** Turn the ignition key on 2 times in sequence and arm the system with the original remote control within 15 seconds.

**To disarm the system :** Press the button on the original remote control unit. The red LED will turn off.

**Alarm Memory :** It is advisable to periodically check your system by triggering the circuits. If you do this within 30 seconds, if the red LED does not turn off when the system is disarmed but flashes in one of the sequences detailed below, this means there was an alarm :

|                                     |  |
|-------------------------------------|--|
| It goes out once every 6 seconds    | There was an ultrasound alarm              |
| It goes out twice every 6 seconds   | There was a door alarm                     |
| It goes out 4 times every 6 seconds | There was bonnet/boot alarm                |
| It goes out 8 times every 6 seconds | There was a self power, key positive alarm |

On turning the starter key, the memory is reset.

**Emergency :** The electronic emergency key can be used to take the alarm system off-line.