



## Operating Instructions for Meta M870 Alarm System

**ARMING** Press the transmitter briefly to set the alarm function and/or lock the doors. The hazard lights will flash two times and the LED will flash. There is a 25 second setting time in which you can test all alarm trigger points (door pin switches, ultrasonic etc). During this period, if the doors are opened or if there is movement inside the vehicle, the hazard lights will give a brief flash to indicate the presence of an alarm trigger.

**DISARMING** Press the transmitter once – hazard lights will flash once, the LED will go out. If the alarm has been triggered in your absence, the alarm will give a short bleep to alert you to the situation. The LED will flash in one of 4 different sequences to indicate which circuit triggered the alarm :

1 x flash every 6 seconds	=	Ultrasonics
2 x flashes every 6 seconds	=	Doors
4 x flashes every 6 seconds	=	Voltage drop, boot or bonnet.
8 x flashes every 6 seconds	=	Ignition has been activated

**INTERNAL SENSOR DISCONNECTION** The internal sensors can be disconnected should you need to leave an animal or child in the car for a short period of time or leave the windows or sunroof open. To do this, press and hold the transmitter for 3-4 seconds, the system will confirm that the movement sensor has been disconnected by emitting three short beeps, the LED will become permanently lit during the setting period. This feature will be automatically cancelled on the next operation of the alarm system.

**SYSTEM CHECK** It is advisable to periodically check your system by triggering circuits. If you do this within 30 seconds of setting the alarm, confirmation that a particular circuit is protected will be given by one short flash of the hazard lights.

**DOOR OPEN FEATURE** Should you arm your system without shutting the door correctly, the alarm system will emit three short beeps to warn you of the situation.

**SYSTEM OVER RIDE** In the event of transmitter loss/damage, the system can be switched off by the use of the system over ride key, ask your dealer for details.