


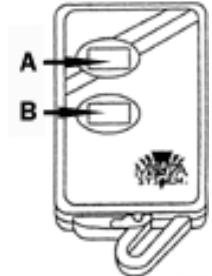

M999T Operating Instructions

- To arm the alarm system press button 'A'
- To disarm press 'A' again.
- To disarm the immobiliser, press button 'A' to turn the alarm system on then press button 'A' again to turn the whole system off.
- To arm the alarm with no interior sensor press button 'A' then button 'B' within 45 seconds
- If the alarm system is sounding an alarm and you wish just to mute the siren press button 'B'.



Disarming with the "override code"

Disarming is only possible when the system is armed via remote control or passive armed, but not during the 45s initial immunity period.

- All systems are factory preset with a random 5-figure sequence. This code is printed on the Orange remote control code card. The owner should store this card securely as it can be used to disarm the system and also add and remove transmitters (dealer function).
- To disarm the system using the override code, use the following procedure:
 1. Turn the ignition on (the LED will be on)
 2. Turn the ignition off within 10s (the LED will flash with an even sequence)
 3. Turn the ignition on when the LED has flashed the number of times corresponding to the first digit of the override code
 4. Turn the ignition off within 10s (the LED starts a new flash sequence)
 5. Turn the ignition on when the LED has flashed the number of times corresponding to the second digit of the override code
 6. Continue with this procedure until the entering of the fifth digit.
 7. When the fifth digit has entered, if the code is correct, the system disarms.

Warning! If the three wrong override codes are entered, the system doesn't allow the disarming with the override code. At this stage is necessary to wait for 30 minutes with the ignition off before entering the correct override code.

New Synchronization

Should one of the transmitters fail to operate the alarm, it may be due to loss of synchronization. To reinstate, it will be necessary to carry out the following procedure: -

- Ensure you are within range of the alarm system and press both remote buttons at the same time.
- Wait until the remote LED goes out.
- Release them and check the remote LED comes back on.
- Press either button on the remote control. Your remote will now be synchronized again with the system.

Should your transmitter still fail to operate, please consult your installer.