



M99T2 / M36T2 Operator Instructions

DISARMING YOUR SYSTEM : Pressing the hand held transmitter whilst your system is in the armed or partially armed condition, will place the system in the disarmed condition. A single flash of the hazard lights and the unlocking of the vehicle central door locking system will confirm this.

ARMING YOUR SYSTEM : Pressing the hand held transmitter for up to two seconds, whilst your system is in the disarmed condition will arm the system. Two flashes of the hazard lights and the locking of the vehicle central door locking will confirm this. The system LED will also begin to flash. During the first 25 seconds of the arming or partial arming condition, it is possible to test the various alarm triggers by deliberately activating them one at a time. A brief flash of the hazard light circuit will indicate confirmation that the respective input has been received. The following protection is now in place :

1. The vehicle is immobilised
2. Door open detection
3. Boot/bonnet open detection
4. Ignition hot wire detection
5. Internal movement sensor
6. Vehicle battery disconnection detection

If any of the above are activated after the arming period has elapsed, the siren will sound and the hazard lights will flash for a 30 second period.

PARTIAL ARMING : Pressing the hand held transmitter for up to four seconds, whilst your system is in the disarmed condition, will partially arm the system. 3 flashes of the hazard light circuit, the locking of the vehicle central door locking system and the LED flashing confirm this. The system is now armed as above with the exception that the internal movement sensor has been deactivated.

ALARM MEMORY FUNCTION : On placing the system in the disarm condition. The alarm memory feature is automatically activated. If the system has been triggered during the previous armed condition, the LED will indicate the trigger input responsible, for a period of 35 seconds as follows :

- 1 flash every 6 seconds – interior movement sensors
- 2 flashes every 6 seconds – door input
- 4 flashes every 6 seconds – bonnet/boot input
- 8 flashes every 6 seconds – ignition input

After 35 second period, the LED will extinguish, however the alarm memory function will repeat every time the system is disarmed. To erase the alarm memory function, the hand held transmitter must be pressed whilst the vehicle ignition is ON.

IMMOBILISER ARMING : The immobiliser will arm and disarm whenever the alarm is armed or disarmed respectively. Alternatively, on disarming the system, the immobiliser only will rearm within 18 seconds unless the vehicle ignition is switched ON. The LED will flash. Press the transmitter briefly to disarm the immobiliser, the LED will go out. **Disarming using the emergency contact key :** To disarm the immobiliser only, in case of emergency/lost transmitter etc, insert and remove the contact key into and from the receptacle.

ANTI HIJACK FEATURE : To protect the driver, passengers and contents from personal attack, the doors will automatically lock whilst the vehicle is being driven.

AUTO RE-ARM : For enhanced security, the complete system will auto re-arm within 40 seconds of disarming unless one of the doors are opened.

Ask your installer for details on selectable options.

NOTE : For all service and maintenance requirements, contact your local Meta agent.
Any unauthorised alterations to the system may invalidate the certificate of installation