

Meta Programming Instructions for Random Encrypted Remotes (16 digit code)

Not M357 Range of bike alarms

Programming 16 digit Single Button Remotes

You will need one working remote to program a new remote into the system. This remote must be enabled by a dealer with a 16 digit code which is supplied on a plastic card, without this code the alarm brain will have to be sent back to be reprogrammed.

- 1 Arm and disarm the alarm sixteen times or until the alarm stops responding, alarm now in program mode.....
- 2 Once in program mode press the button of the new remotes(s), press the button of the original remote(s). This must be done within 8 seconds of each action. If 8 seconds pass without any actions the alarm will automatically exit programming mode and you will have to start from step 1.
- 3 Wait 8 seconds to exit learning mode.
- 4 Test remotes.