



MetaSystem UK Limited

Coding in a replacement RK36S key into M33/M36T2

- Disarm the immobiliser using an original working decode key.
- The LED on the decode head will go out.
- Within 10 seconds turn the vehicles ignition On and then Off.
- Within the next 10 seconds insert the new RK33 decode key.
- The LED on the decode head will light.
- If the coding has been accepted the LED in the decode head will remain off for 14 seconds.
- If the LED in the decode head continues to flash immediately after the new key has been inserted the new key has not been accepted. The usual reason for this is that either the replacement key has already been coded into another M33/M36 or that the M33/M36 has had all its vacant slots filled (it will accept up to 5 keys in total).
- If the replacement key has already been programmed it also can be cleared using the PR20.